



# Cabana Double Wide

Cubicles

## Cabana Double Wide

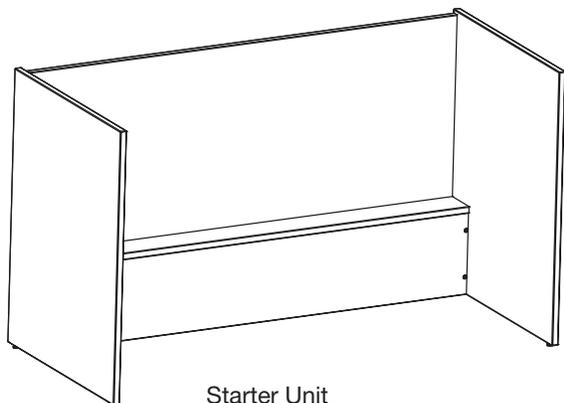


Starter Unit

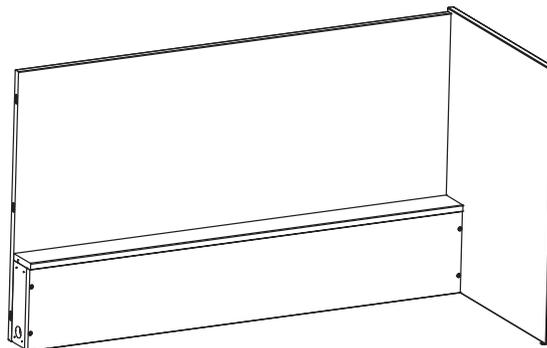


Adder Unit

## Cabana Double Faced Double Wide

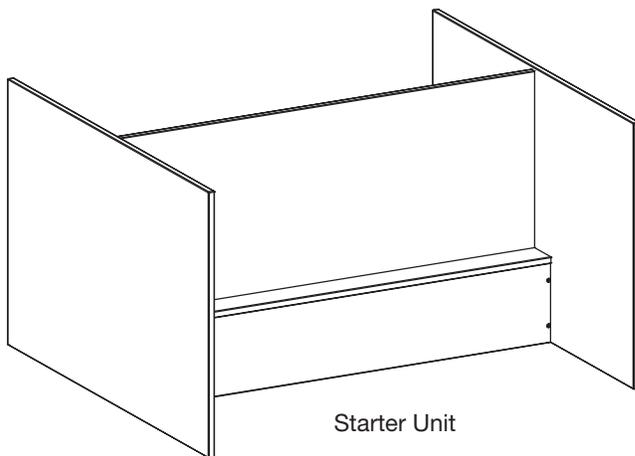

Starter Unit

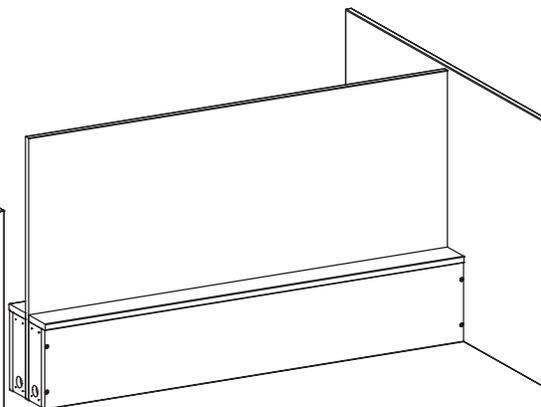

Adder Unit

### Tools Required:

Phillips screwdriver  
6mm wrench



16-1/2"  
Z-bracket




M6 x 10mm  
Pan Head Screw




#12 x 1"  
Pan Head Screw




MOD-EEZ  
Stud



M/F MOD-EEZ  
Stud




8" x 1-1/2"  
FH Screw




1/4-20 x 1-3/4"  
JC Connector  
Bolt

Cabana-Double-Wide-Instructions-240328



# Cabana Double Wide


Cubicles

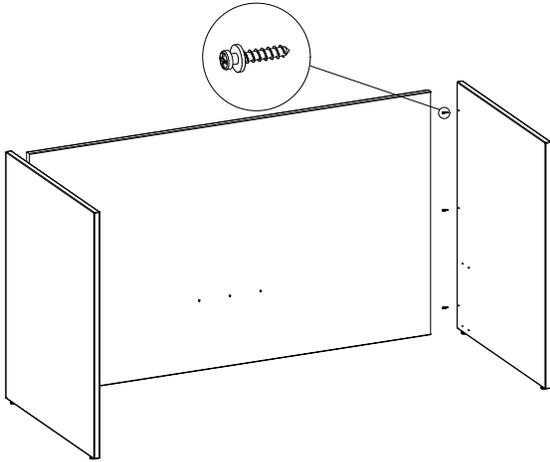

## STEP 1 (Starter Unit) - Attaching end panels to back panels

Screw Mod-eez studs into holes in vertical center line of double end panels or back edge of single end panels.


Slide Mod-eez studs into factory installed Mod-eez clips on either end of back panels.

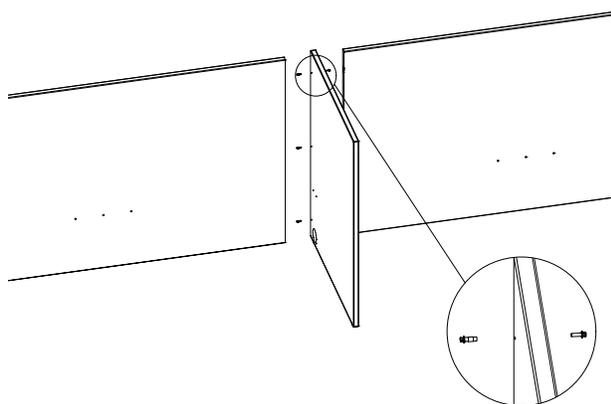

## Step 1.2 (Adder Unit):


Mod-eez shoulder screws for double sided units have both male and female parts. One on each side of the center divider panel. Insert female Mod-eez connector bolt into pre-drilled holes in center divider panel. Then insert male Mod-eez shoulder screws into female connector bolts. Place panel (with pre-installed Mod-eez clip) onto the male Mod-eez screw in the center divider panel, as shown. Using a mallet, tap down to secure in place.

Cabana-Double-Wide-Instructions-240328




# Cabana Double Wide

Cubicles

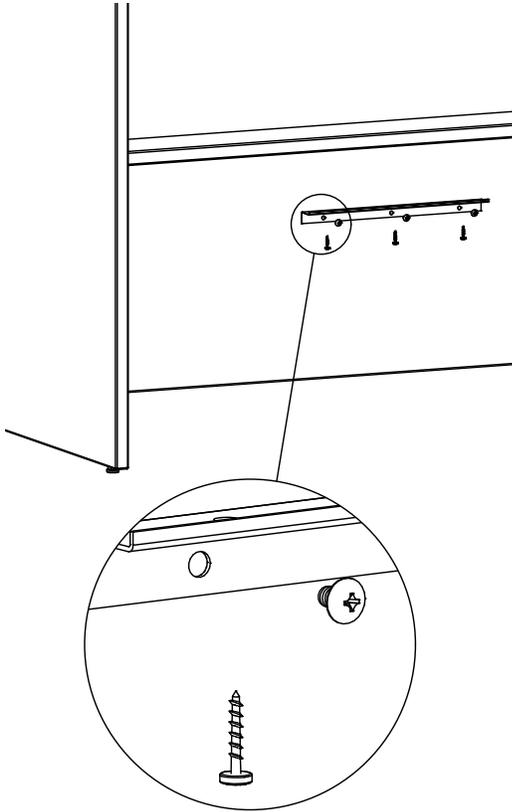

## STEP 2 - Attach Worksurface Z Brackets


Screw M6 x 10mm pan head screw through “Z” bracket into brass inserts in end/intermediate panels finger tight only for now.

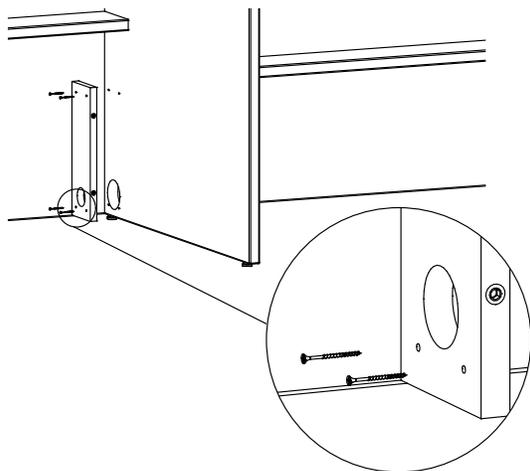

## STEP 3 - Attach Side Support Panels

Using (4) #8 x 1-1/2” flat head screws, attach side support panels to back bottom section of both vertical panels of the cubicle.


Cabana-Double-Wide-Instructions-240328



Assemble units only as described in this guide. All fasteners must be tightened securely and checked regularly. Failure to do so could cause instability and injury.


# Cabana Double Wide

Cubicles

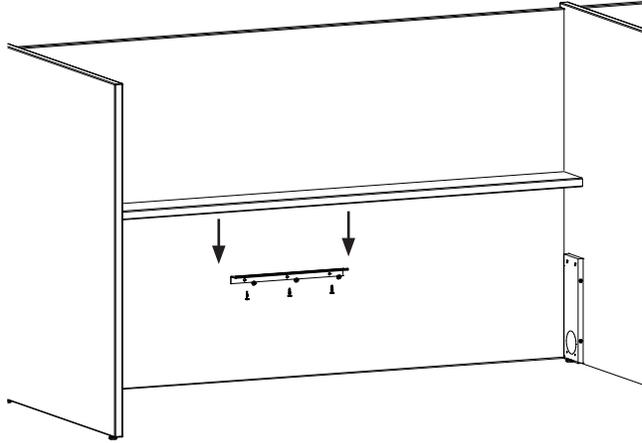

## STEP 4 - Attach Worksurface

Position the work surface onto the "Z" brackets. Make sure the short end of the "Z" bracket sits in the groove. Screw angle brackets to the underside of the work surface using #12 x 1" screws. Tighten bolts from Step 2.

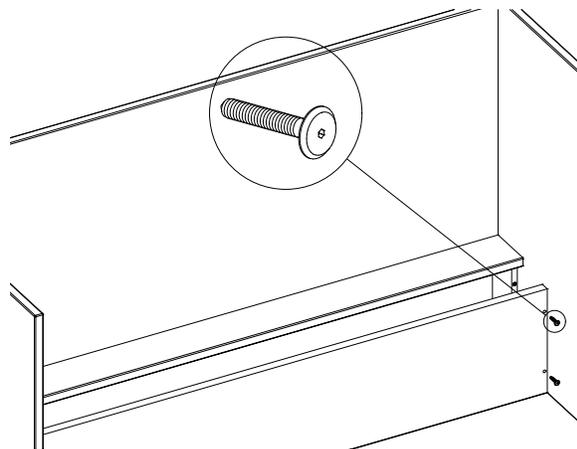

## STEP 5 - Attach Wire Chase Panel to Front of Worksurface

Using 1/4-20 x 1-3/4" JC Bolt, attach the wire chase panel to the front of the work surface and support panels.

Cabana-Double-Wide-Instructions-240328

