
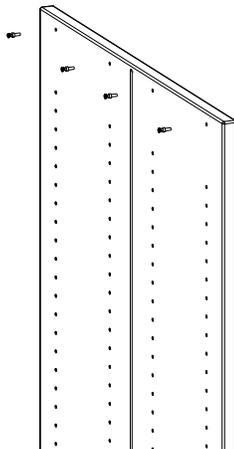


Roundhouse Starter, Adder and Wedge Units

Shelving

Tools Required:

- Phillips head screwdriver

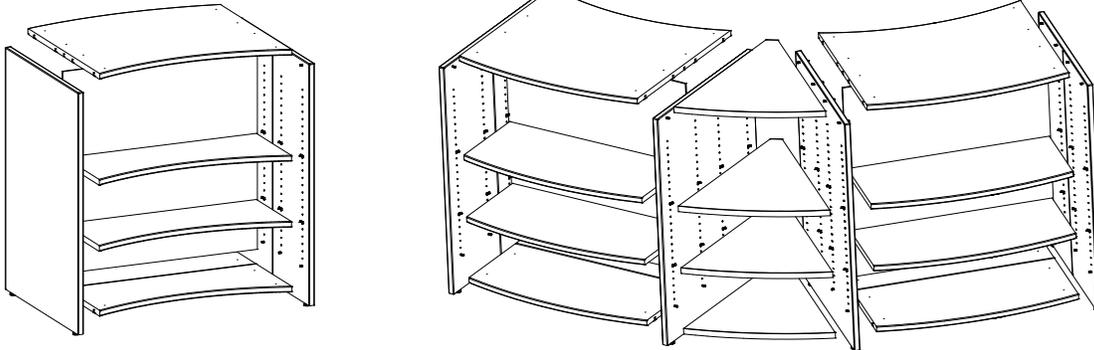

STEP 1 –Attaching the cams


Lay end panels, outer face down, on a protected surface to avoid scratching. Screw cam bolts into pre-bored holes in top and bottom of panels. Set one panel aside.

For Adder Panels:

Screw cam bolts into pre-bored holes in both sides of the intermediate panels. **The cam bolt must be installed so its shoulder is tight to the panel face. DO NOT OVERTIGHTEN and strip the wood.**


Roundhouse Starter, Adder and Wedge Units

Shelving

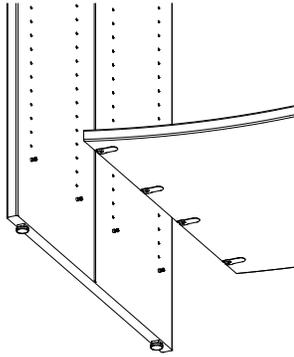


STEP 2 - Attaching the base:

Insert cams into pre-drilled holes in base panel, then align cams onto the studs and tighten about ¼ turn clockwise. A groove in the middle of the base panel **captures the back panel**.

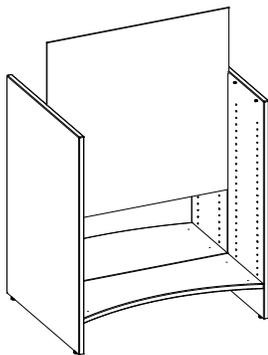

STEP 3- Attaching back panels

Slip the back into the grooves in the side panels and lower into the groove on the base panel. **Note:** *Wedge units do not have a back panel and use shared "Adder" panels with dado only on (1) side.*

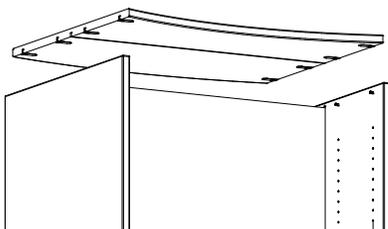


STEP 4 - Attaching the Tops

Insert cams into pre-drilled holes in top, then align cams onto the studs and tighten the cam about 1/4 turn clockwise. A groove in the middle of the top panel **captures the back panel**.

Roundhouse Starter, Adder and Wedge Units

Shelving

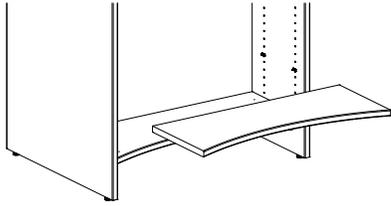

STEP 5 - Installing Shelves:

Slip round pin of shelf clips into appropriate line holes in side panels and lower shelf into place so pointed portion of shelf clip is inserted into pre-drilled holes on underside of shelf.

instructions-roundhouse-230707

