



Malibu

Tables

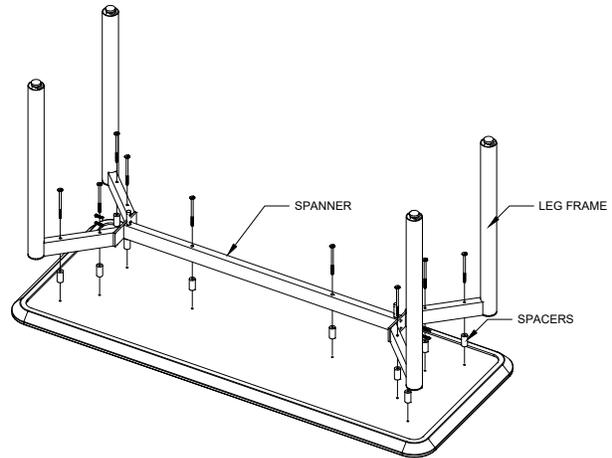

Hardware Included:

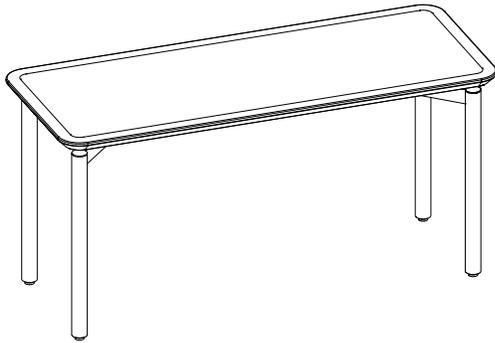

1/4-20 x 1"
Button Head Bolts



1/4-20 x 110mm
Joint Connector Bolts



1-1/2" Spacer



1/2" Cross Dowel

Tools Required:

- 5/32 Allen Wrench
- 5mm Allen Wrench

Step 1: Install cross dowels in the spanner with the hole orientation towards the leg frames. Screw each of the two welded leg frames to the spanner using the 1/4-20 x 1" BH Bolts into the cross dowels.

Step 2: Lay tabletop upside down on a level clean padded surface. Align leg frames and spanner(s) with the factory installed inserts in the table top. Spacers will be aligned with the holes in between the leg frames and spanners and the top. Fasten the leg frames and spanners to the top, through the spacers, using 110mm Bolts.

Tighten all bolts.

instructions-malibu-230306

