



Quorum


Tables

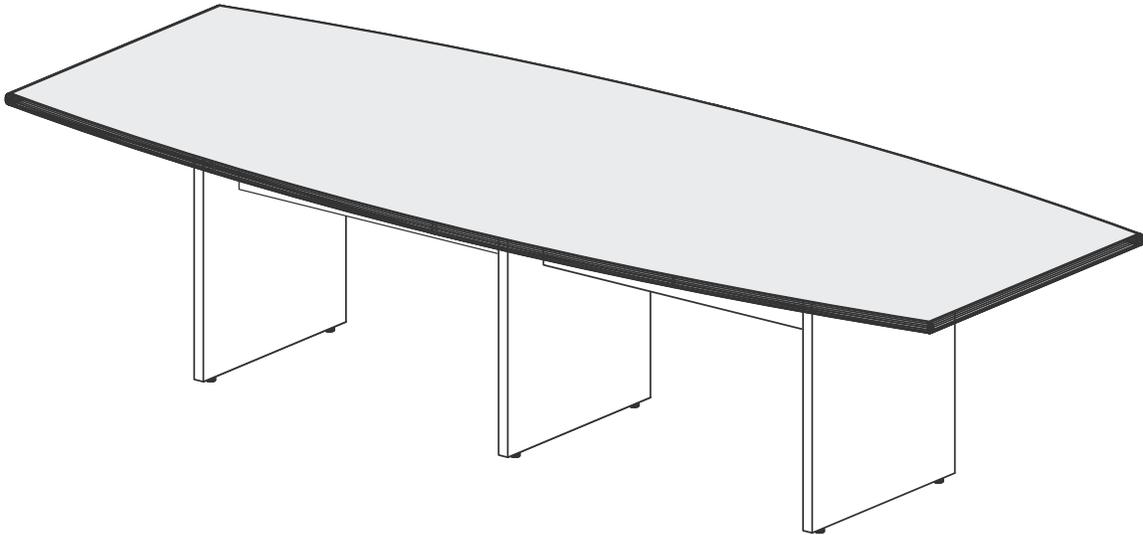


Hardware Included:



#8 x 5/8"
PH Screw




#8 x 1-1/2"
FH Screw




1/4-20 X 15mm
Connector bolt



3" x 3" Mending
plate



1" x 1" x 2"
L-Bracket




7" Z-Bracket

Tools Required:


- Phillips Head Screwdriver
- Flat Head Screw Driver
- Allen Wrench

instructions-quorum-230213



Quorum

Tables

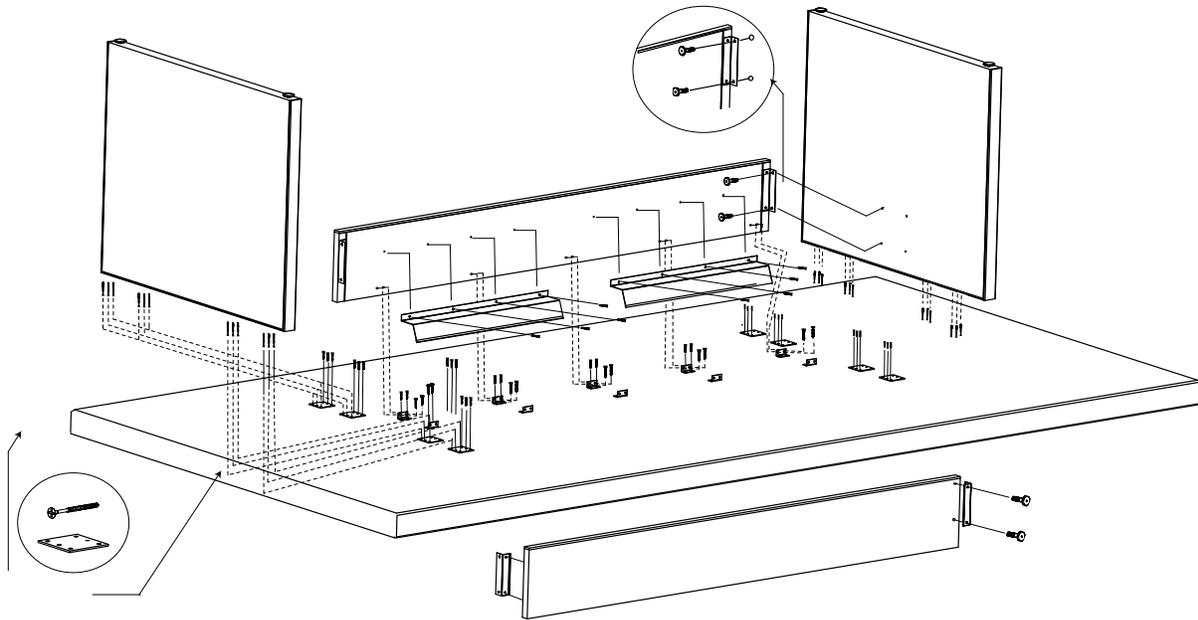

Step 1: Place top with laminate side down on a protective surface.

Step 2: Loosely attach z-brackets to the end and adder panels with the bolts.

Step 3: Set the stretchers in place so the lip of the z-bracket fits into the dado on both ends of the stretcher, then attach the stretcher.

Step 4: Now go back and tighten bolts on the end and adder panels.

Step 5: Center the assembled base on the table top; attach it to the top with the small L-brackets and screws as shown.

Step 6: Flip the table over and adjust the glides as needed to make the table level.

*Repeat steps 2-4 if table requires third panel.

instructions-quorum-230213

