

## **Tables Tools Required:**

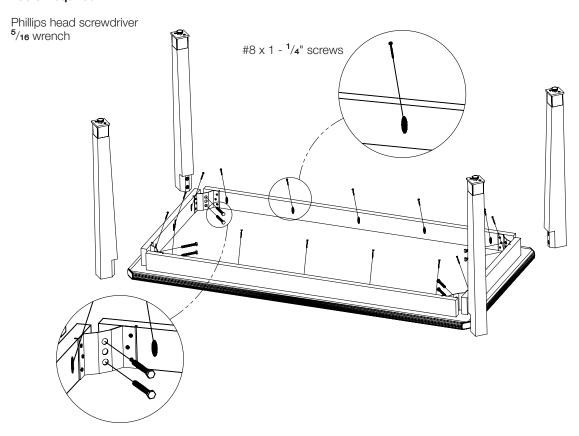

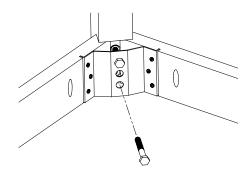

## Step 1 - Attaching the legs to apron

 For each leg, fit leg into outside corner of apron with predrilled hole facing inward and attach leg to corner bracket on apron using  $\frac{5}{16}$  -18 x 2 -  $\frac{1}{2}$ " bolt.

## Step 2 - Attaching apron and leg assembly to table top

- Place top upside down on clean, padded surface.
  Center apron and leg assembly onto underside of top.
  Attach using #8 x 1 -¹/₄" screws in predrilled holes.

charleston-table-instructions-230303



