
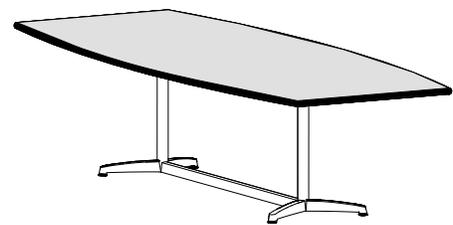
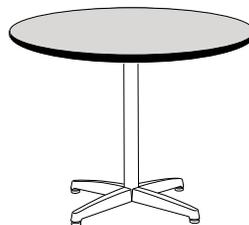
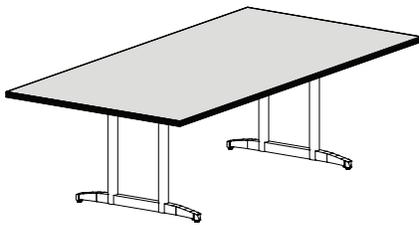


Derby

X-Base, 4X-Base, T-Base, TT-Base, and Y-Base

Tables

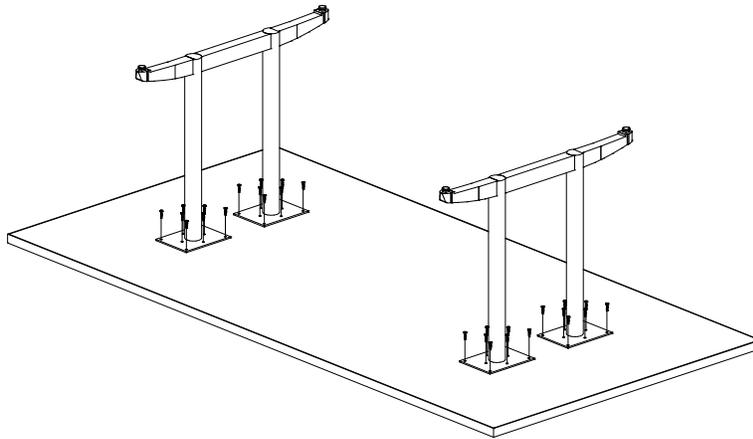

Hardware Included:



#12 x 1
Pan Head Screw

Tools Required:

- #3 Phillips Head Screwdriver
- (2) 9/16 open ended wrenches.


Step 1: Place the table top upside down on a clean, padded surface. See image on second page for orientation of mounting plate to the castings on “Y” shape bases.

Step 2: Assemble stretcher(s) to leg columns, tighten nuts and back off 1/8 turn.

Step 3: Center leg assembly on underside of top and attach using #12 x 1" PH Screws (do not over tighten).

***Note:** Should castings need to be assembled to columns refer to picture at right. Install bolt in casting as shown (reverse bolt direction if using 4" long casting.) Holding spacer and nut in one hand and casting in another, place bolt through hole in the column, slide spacer onto bolt inside of tube as shown, assemble nut. Tighten nut firmly using 2 9/16 wrenches.


instructions-derby- 230306



Derby

X-Base, 4X-Base, T-Base, TT-Base, and Y-Base

Tables

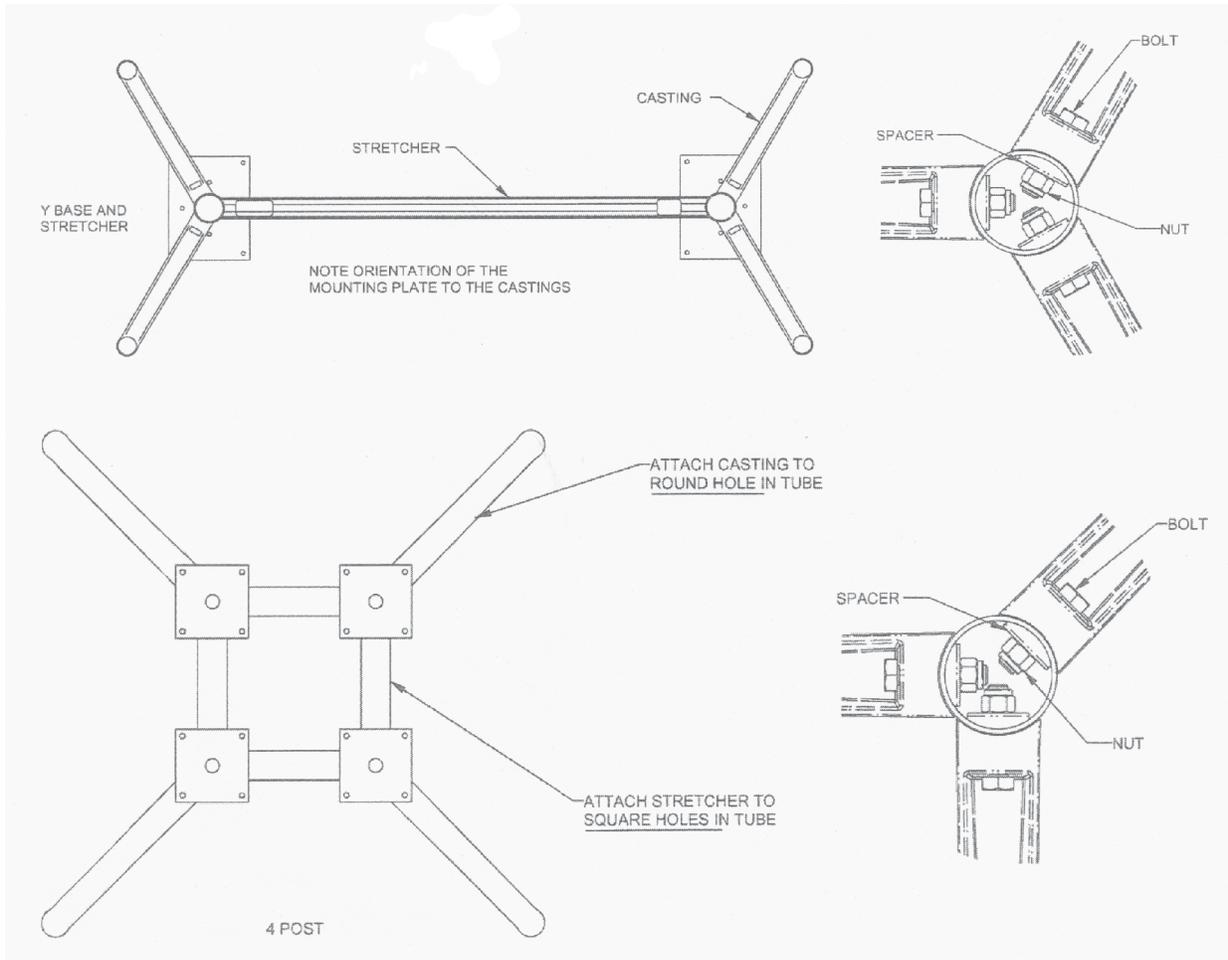

instructions-derby- 230306

